



Assembly Instructions

Tools Needed for Assembly: Phillips Screwdriver, 1/2 inch Wrench



After unpacking your swing, lay out the 4 main pieces on the ground near where it is to be hung.



To begin assembly, use the 1- 1/2 inch screw (provided) and insert it into the back of the swing and screw it to the armrest.



Next, slide the carriage bolts through the pre-drilled holes and apply the first set of washers and nuts. Then tighten the nuts firmly with a 1/2 inch wrench. Note: all the bolts should point toward the back of the swing to receive the chain.




Taking one end of the chain, slide it into the armrest hole and thread it over the carriage bolts.



Now apply the second set of washers and nuts and tighten firmly with a 1/2 inch wrench.



The complete chain assembly should appear as shown.

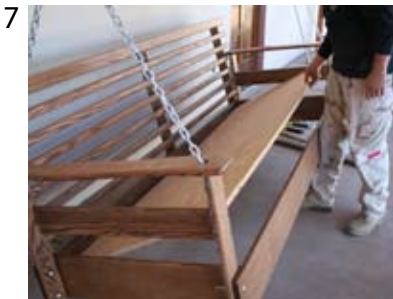

Insert the mattress base and fasten it into the frame with screws.



Insert the mattress and enjoy!